

TIGER ELECTRONICS
INC.®

 
 


TOUCH 'N PLAY GRAND PIANO™

MODEL NO: 9-008-2
AGES 3-7

The Touch 'n Play Grand Piano provides hours of musical entertainment. This piano features numerous functions including recording capabilities. Following are brief descriptions of all the functions of the TOUCH 'n PLAY GRAND PIANO.

The Touch 'n Play Grand Piano requires 4 "AA" or LR6 batteries that are to be installed at the bottom of the unit. Open the battery door by using a Philips® screwdriver, loosen screw in battery compartment door and pulling back.

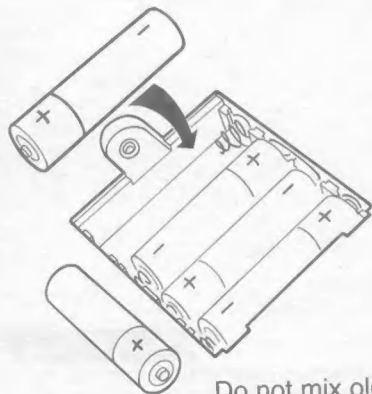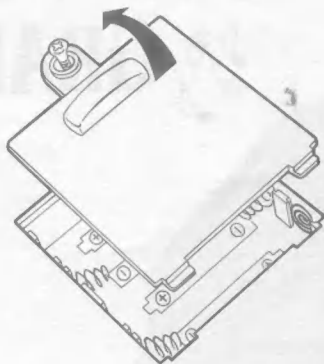

Insert batteries according to the diagram provided on the label in the compartment. (Battery installation should be done by adults.)

For proper function:

Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc) or rechargeable (nickel - cadmium) batteries.

AUTO POWER
OFF SYSTEM

POWER

ON/OFF



UP

DOWN



 
VOLUME

POWER ON/OFF

Press *ON/OFF* to start and stop the unit. The unit also features an *AUTOMATIC* shut-off after 3 minutes of not being played.

VOLUME

Up button will increase the volume.
Down button will decrease the volume.

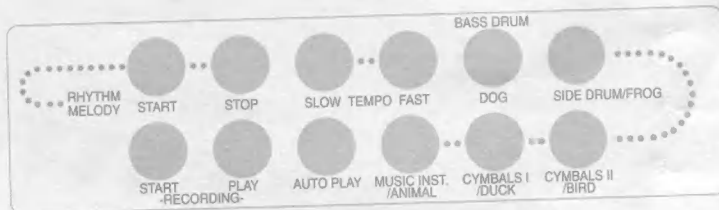

"Rhythm/Melody START & STOP

Push the *START* button, and choose any one of the *BLACK* piano keys to play a specific *RHYTHM*. Then one of the pre-recorded rhythms will automatically play. While one of the *RHYTHMS* is played, you may play any melody along with that *RHYTHM* or you can create your own song.

Auto-playing can be stopped by pushing the **STOP** button. If you want to play one of the 19 built-in melodies, press **START** and press one of the **WHITE** piano keys that has the same number that the unit has listed on the song list. For instance, if you would like to hear "Twinkle, Twinkle Little Star" you press the 8th the white key from the left and the melody will play.

This way you can select songs up to #15, because there are only 15 white keys. After #15, selection cannot be made among 16/17/18/19. These four songs will play automatically in the numerical order when you press the 15th white key.

Tempo SLOW/FAST

Press the **SLOW** or **FAST** buttons to control the beat.

INSTRUMENT/ANIMAL SOUNDS (BASS DRUM/DOG, SIDE DRUM/FROG, CYMBALS I/DUCK, CYMBALS II/BIRD)

When one of these buttons is pressed one time, you will hear the particular percussion sound. Then to hear the animal sound you need to press the **MUSIC/INST/ANIMAL** key before you press any of these buttons. To return to the **INSTRUMENT MODE** need to press the **MUSIC/INST/ANIMAL** key again.

AUTOMATIC PLAY

 
By pressing this button, 19 pre-recorded demo-songs will be played automatically, starting with the first melody through #19. If you do not select any particular song, then auto-playing will continue in the numerical order. In case you want to stop listening to auto-playing, simply press the

AUTO PLAY button again, or press the **STOP** button. Unfortunately, you cannot play along with the pre-recorded melodies.

"Recording START & PLAY" buttons

If you want to record your own song, press the **START** button first and play as you like. After you finish playing, press the **PLAY** button, and you'll hear your own performance being played back automatically. When you record a second time, the previous recording will automatically be erased. If you want to stop recording, press the **STOP** button, and you'll have the regular playing function again.

**The duration of recording time is approximately 20 seconds.

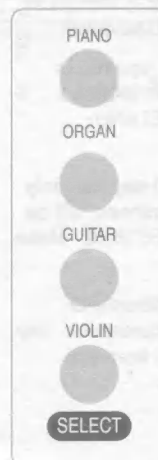

DIFFERENT PLAY MODES

The Touch 'n Play Grand Piano can be played in any one of four different modes either *Piano*, *Organ*, *Guitar* or *Violin*. To play in one of these modes simply press one of the corresponding keys for the particular mode.

The Touch 'n Play Grand Piano includes its own microphone so kids can sing along to their songs. The microphone is attached at the bottom of the unit. There is a slot provided marked "Microphone" where the microphone cord is inserted.

Also, included in this book is the music sheets for all 19 built-in nursery rhyme melodies. This will help kids learn how to play these songs and have a better understanding for the notes.

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$18.00. Make check or money order payable to : **Tiger Electronics, Inc.**

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box or use a good-quality carton with packing materials.
2. Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

Jingle Bells


G



Jin - gle bells, jin - gle bells, jin - gle all the way,

The first line of music is written on a single staff in G major (one sharp). It begins with a G chord. The melody consists of eighth notes: G4, A4, B4, A4, G4, F#4, E4, D4. The lyrics are aligned under the notes: 'Jin - gle bells, jin - gle bells, jin - gle all the way,'.

 
Am G D7 G



Oh what fun it is to ride in a one - horse o - pen sleigh!

The second line of music continues on the same staff. It features four chords: Am, G, D7, and G. The melody continues with eighth notes: C4, B3, A3, G3, F#3, E3, D3, C3. The lyrics are: 'Oh what fun it is to ride in a one - horse o - pen sleigh!'.

Happy Birthday

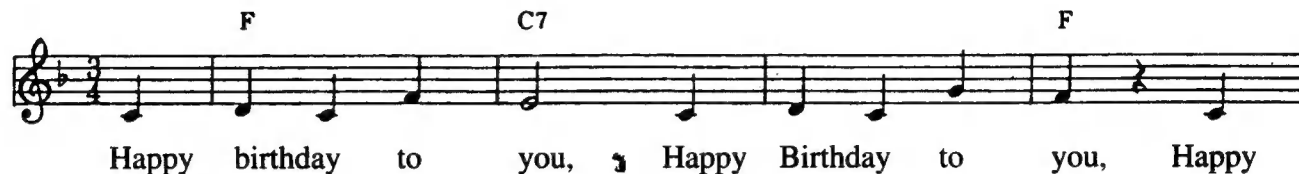


Old MacDonald

The musical score for "Old MacDonald" is presented in three staves, each with a treble clef and a key signature of one flat (B-flat). The time signature is 2/4. Chord symbols are placed above the notes: F, Bb, and F on the first staff; G, C, and F on the second staff; and Bb, F, G7, C7, and F on the third staff. The lyrics are written below the notes.



Old Mac - Don - ald had a farm,

E - I - E - I - O; And on his farm he


 
had a cow, E - I - E - I - O; With a

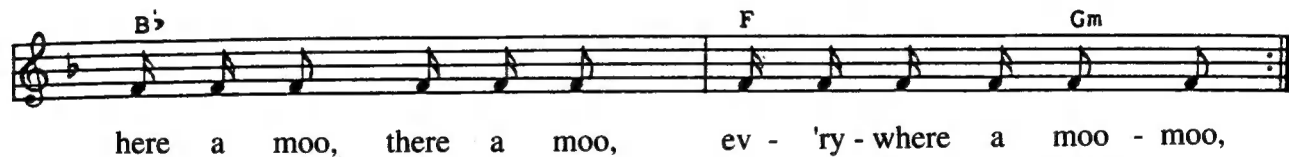


Mary Had a Little Lamb

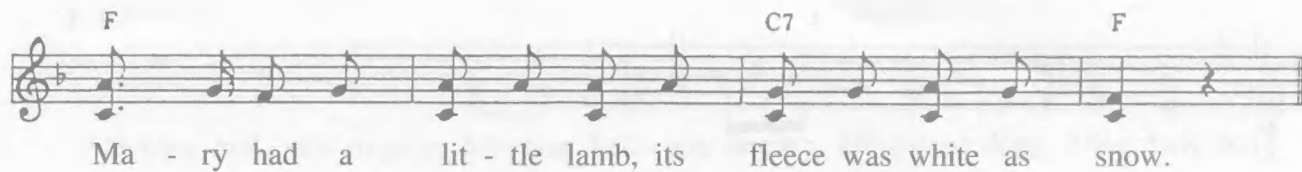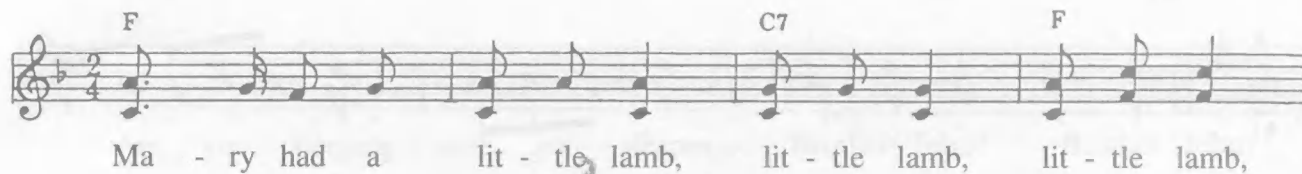  

Are You Sleeping?

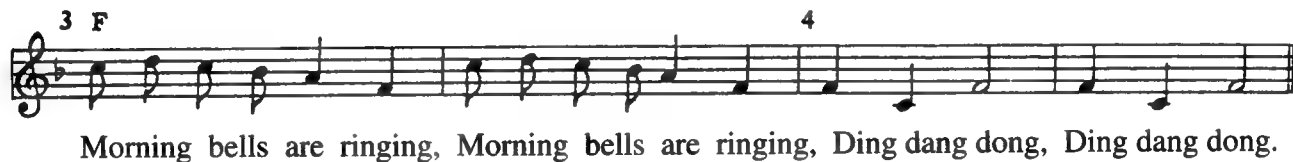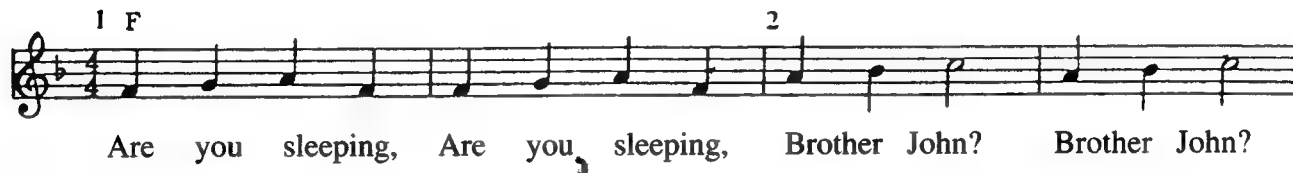  

Row, Row, Row Your Boat

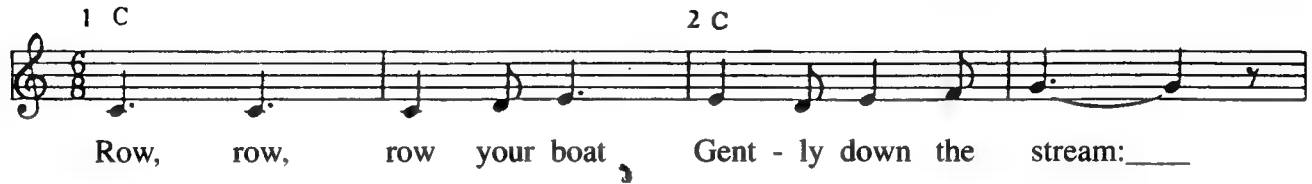 

Twinkle, Twinkle, Little Star



Twin-kle, twin-kle, lit - tle star,³ How I won - der what you are.



Up a - bove the world so high, Like ■ dia - mond in the sky.



Twin-kle, twin-kle, lit - tle star, How I won - der what you are.

Swanee River



Way down upon de Swanee river, Far, far a - - way,



Dere's wha my heart is turning ebber, Dere's wha de old folks stay.



All up and down de whole cre-ation, Sad ---- ly I roam,



Still longing for de old plan - ta - tion, And for de old folks at home.



All de world am sad and dreary, Eb - ry where I roam,



 
Oh! darkeys how my heart grows weary, Far from de old floks at home.

Hickory Dickory Dock



Hick - o - ry, Dick - o³ - ry, Dock!

The



mouse ran up the clock;

The clock struck one, and



down he run,

Hick - o - ry, Dick - o - ry, Dock!

The Mulberry Bush



Here we go round ♪ The Mul - ber - ry Bush, The



Mul - ber - ry Bush, The Mul - ber - ry Bush, Here we go round The



Mul - ber - ry Bush so ear - ly in ____ the morn - ing.

[illegible]

17



pol-ly wol-ly doo-dle all the day.

Fare thee



 
 
 
well, my fair - y fay,

For I'm goin' to Lou' - si - an - a for to



see my Su-zi-an-na, Sing-ing pol-ly wol-ly doo-dle all the day.

Looby Loo

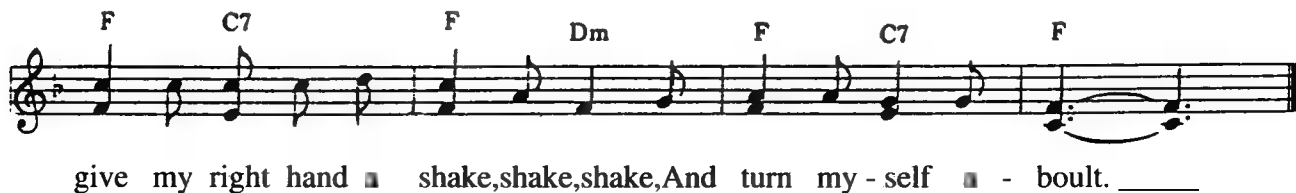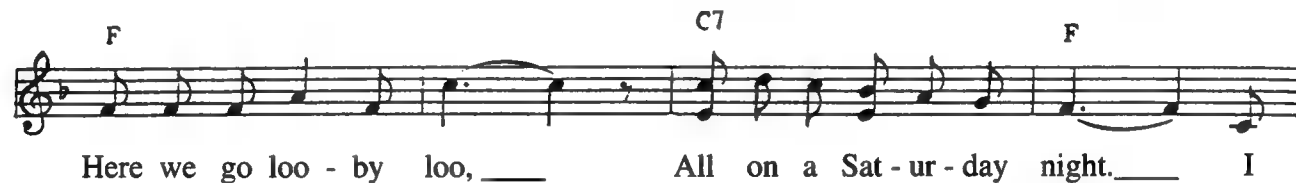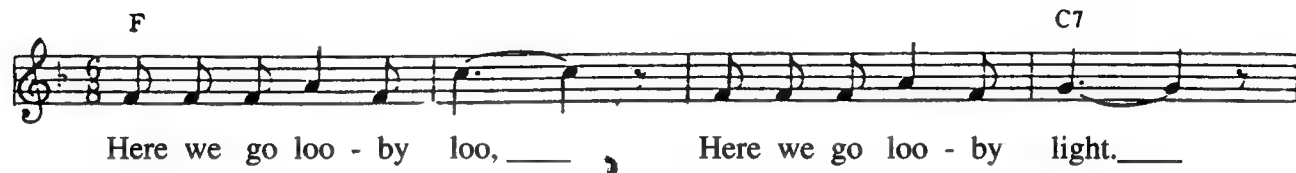

London Bridge

 
 


 
Lon - don Bridge is fall - ing down, fall - ing down, fall - ing down,




Lon - don Bridge is fall - ing down, My fair la - dy.




Three Blind Mice

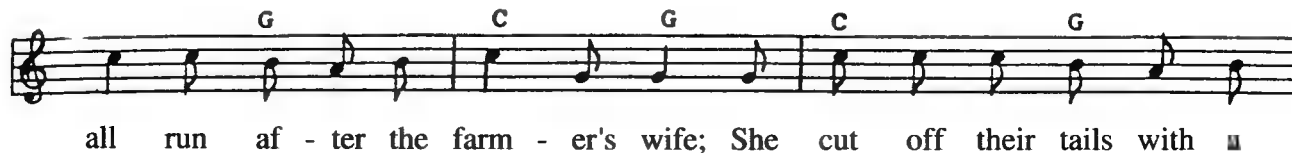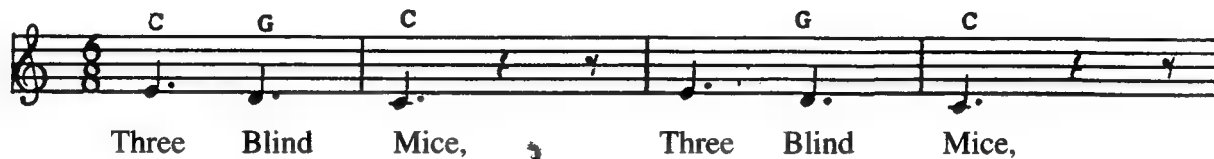

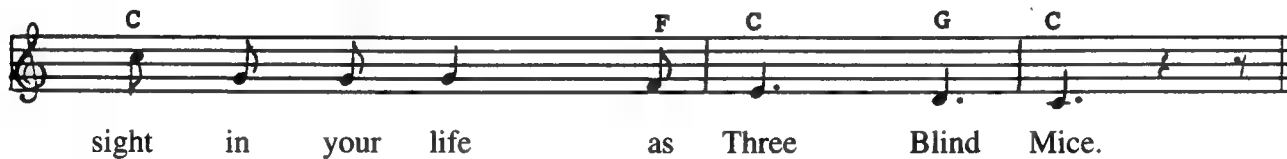

Pop Goes the Weasel

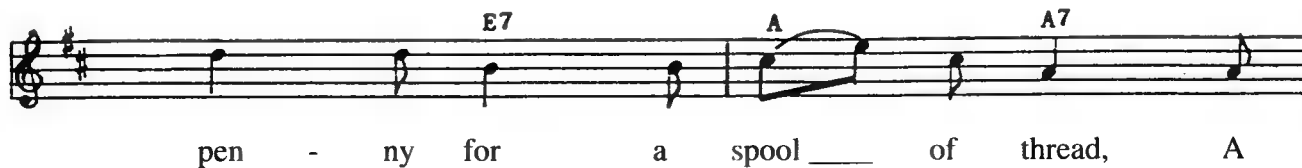 

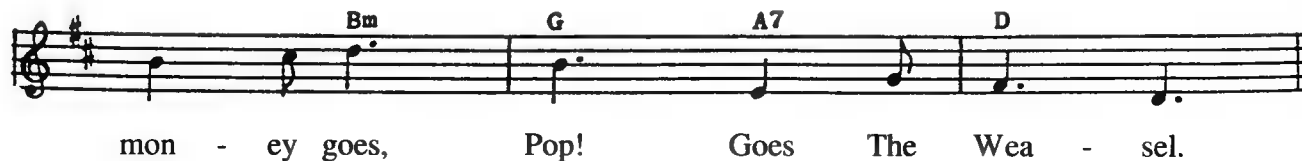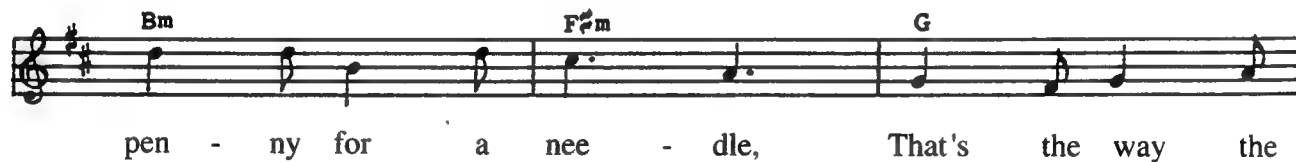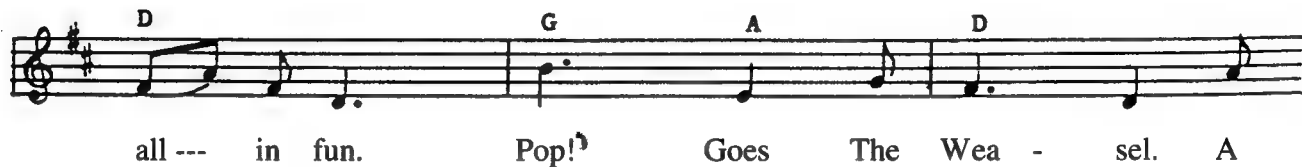   

Rock-a-bye Baby



 
Rock - a - bye Ba - by, on the tree top,



When the wind blows, the crad - le will rock,



When the bough breaks, the crad - le will fall,



Down will come ba - by, crad - le and all.

Do Re Me Song

 
 
 


thread, _____ La --- a , note to fol - low sew, _____

Tea --- a drink with jam and bread _____ That will bring us

back to do - oh - oh - oh!

Joy To The World

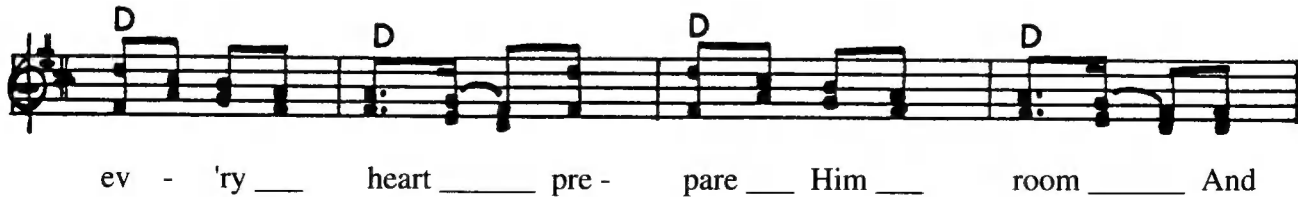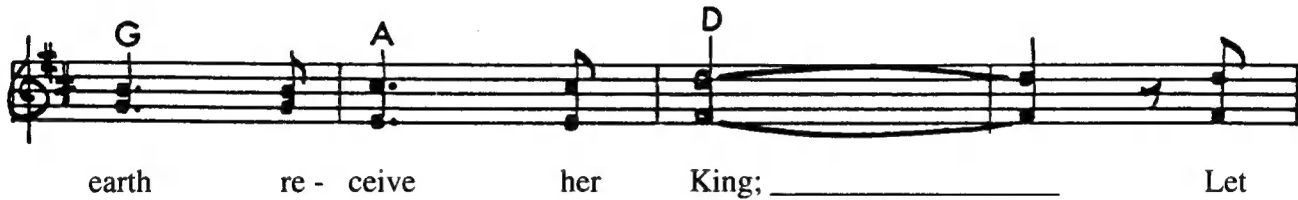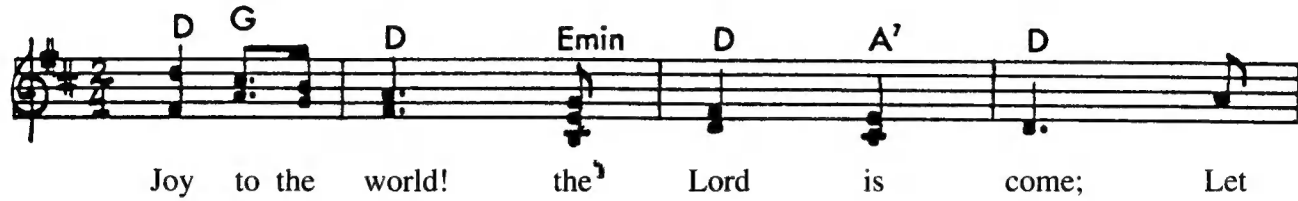

heav'n and na - ture sing, And heav'n and nature ___ sing, And

heav'n ___ and heav'n _____ and na - ture sing.



© 1995 COPYRIGHT & TM OF TIGER ELECTRONICS, INC.

980 Woodlands Parkway, Vernon Hills, Illinois 60061, USA

© 1995 TIGER ELECTRONICS (UK) LLC.

Belvedere House, Victoria Avenue, Harrogate, North Yorkshire HG1 1EL, England

90082IWTIE-2
PRINTED IN HONG KONG